

ø.125 –

- 5"

DISASSEMBLY ROD -

CHECK THIS

PORTION OF BORE ONLY

504

.759

1.009

1.471

1.574

1.884

2.327

ØA MAX.

MODEL

55

155


255

355

525

555

655

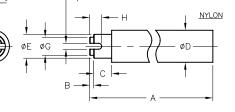



TO FIT ROTOR			SPRING COMPRESSOR								
THREAD		DEUBLIN									
	MODEL	PART NO.	"A"	"B"	"C"	ø"D"	ø"E"	"F"	ø"G"	"H"	
s.062	55	55-666	5"	1/4	1/2	3/4	.490	3/16	.325	1/2	
	155	155-810	6"	1/8	9/16	1"	.740	3/16	.485	3/8	
	255	251-075	6"	1/8	3/4	1 1/4	.990	3/16	.735	3/8	
	355	350-921	6"	3/16	7/8	1 3/4	1.430	1/4	.985	7/16	
	525	525-491	6"	3/16	7/8	1 3/4	1.555	1/4	1.205	7/16	
	555	450-896	6"	3/16	7/8	2 1/8	1.862	1/4	1.415	7/16	
	655	655-534	8"	1/4	3/4	2 1/8	2.000	1/4	1.500	1 1/8	

**ASSEMBLY** 

REBUILDING KIT PARTS LIST

- TEFLON SEAL WEDGE OR O-RING (L)

DA 10

- ROTOR (PRE-ASSEMBLED) (2) BALL BEARINGS BEARING SPACER ROTOR SNAP RING

- SEAL GUIDE

- FLOATING SEAL


- COIL SPRING


## NOTE:


WHEN ASSEMLBING DEUBLIN UNIONS, CLEANLINESS IS AN IMPORTANT FACTOR. ALL PARTS MUST BE FREE OF DIRT AND CHIPS. THE PARTS MAY BE CLEANED WITH CARBON TETRA-CHLORIDE, DENATURED ALCOHOL, OR ANY GOOD CLEANING SOLVENT.

## 2. ASSEMBLE SEAL GUIDE, TEFLON WEDGE (OR O-RING) AND (L) FLOATING SEAL.

NOTE: CLEAN FLOATING SEAL FACE AND LUBE WITH LIGHT VISCOSITY OIL. ALSO LUBE TEFLON WEDGE OR O-RING.

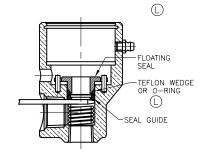

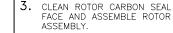

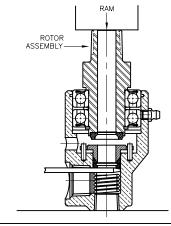

## DISASSEMBLY

8"

10"

10"

1. REMOVE HOUSING SNAP RING AND PLUG HOUSING.

3/4


255

355

525

555


655

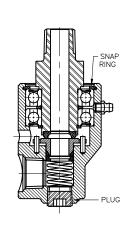

3. REMOVE FLOATING SEAL,

AND PLUG.

TEFLON WEDGE (OR O-RING), SEAL GUIDE, COIL SPRING

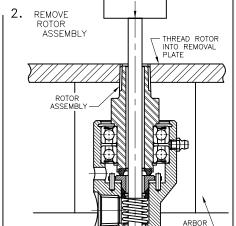

CHECK AREA OF BORE INDICATED FOR WEAR OR PITTING. THE BORE MUST BE SMOOTH

(16-20 RMS FINISH) AND MAY BE ENLARGED TO THE DIAMETERS IN CHART BELOW.

**PRESS** BFD -

(.625 THICK FOR


555 AND 655

SERIES ROTORS)


-DRILL & TAP

Ø.062

ASSEMBLE COIL SPRING. GREASE BEARING BORE. COMPRESS SPRING UNTIL RETAINING PIN CAN BE INSERTED THROUGH ENTRANCE PORT AS SHOWN. REMOVE SPRING COMPRESSOR.

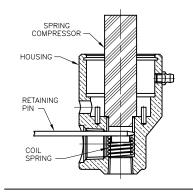


4. ASSEMBLE HOUSING SNAP RING.

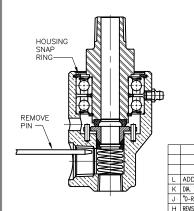

TEST UNION WITH 50 PSI MINIMUM AIR PRESSURE BEFORE PERMANENT INSTALLATION.

PLUG DUOFLOW PORT AND CAP ROTOR. APPLY AIR PRESSURE. PUT SOAP WATER SOLUTION OR BUBBLE SOAP OVER TEST HOLE. ROTATE UNION BY HAND. IF NO BUBBLE RISES, UNION IS 0.K.

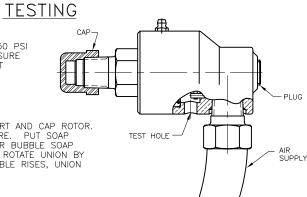

DEUBLIN COMPANY

WAUKEGAN, ILLINOIS, U.S.A.

55 SERIES REPAIR

INSTRUCTIONS = 31-010

			EQUIPMENT	REF:	SCALE	LE FULL	
					DRN	LG	05/05/97
					ENGR		
010103	05/10	NR			APPO		
8603	09/07	JK		FIXTURES			n icomice
	03/02	LG	REQUIRED:	SPECIFIED			
	11/99	MF			TOLERANCES ±.010.		
	05/97	LG					
	8603	8603 09/07 03/02 11/99	8603 09/07 JK 03/02 LG 11/99 MF	010103 05/10 NR 8603 09/07 JK ASSY/TEST 03/02 LG REQUIRED:	8603 (99/07 JK 03/02 LG 11/99 MF	0000   0000	DIN

05/97 LG ECO DATE SIGN

G REDRAWN ON CAD; REPL. REV.F

FLOATING SEAL SEAL GUIDE COIL SPRING

OR O-RING TEFLON WEDGE

