
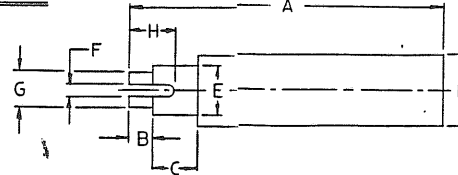


CONFIDENTIAL


THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND IS NOT TO BE TRANSMITTED, REPRODUCED, USED, OR DISCLOSED TO ANYONE WITHOUT THE WRITTEN PERMISSION OF THE DEUBLIN COMPANY.

TOOLING - BY CUSTOMER

SPRING COMPRESSOR



DISASSEMBLY ROD




TRUARC PLIERS

MODEL	PLIERS NO.
057	3
157	5
257	5
357	5
527	5
557	5R

MODEL	A DIA.	B
057	5/16	5"
157	3/8	6"
257	1/2	7"
357	3/4	8"
527	1"	10"
557	1"	10"

MODEL	A	B	C	D	E	F	G	H
057	5"	3/8	1 1/2	1 1/2	.605	3/16	.475	1 1/2
157	6"	1/2	1 1/2	1 1/2	.745	1/8	.490	1 1/2
257	6"	1/2	1 1/2	1 1/2	.740	1/8	.480	1 1/2
357	6"	1/2	1 1/2	1 1/2	.995	1/8	.740	1 1/2
527	6"	1/2	1 1/2	1 1/2	1.457	1/4	.990	1 1/2
557	6"	1/2	1 1/2	1 1/2	1.452	1/4	.980	1 1/2



DA-49

IMPORTANT NOTE

WHEN ASSEMBLING DEUBLIN UNIONS, CLEANLINESS IS AN IMPORTANT FACTOR. ALL PARTS MUST BE FREE OF DIRT AND CHIPS. PARTS MAY BE CLEANED WITH CHLOROTHANE, CARBON TETRACHLORIDE, ALCOHOL OR ANY GOOD CLEANING SOLVENT.

REPAIR KIT PARTS LIST



FLOATING SEAL, SILICON CARBIDE SEAL, BASKET, O-RING, SEAL GUIDE, COIL SPRING

2 ASSEMBLE SEAL GUIDE, O-RING & FLOATING SEAL

NOTE: CLEAN FLOATING SEAL FACE AND LUBE WITH A LIGHT VISCOSITY OIL.

3 GREASE BEARING BORE OF HOUSING. INSTALL BASKET AND SILICON CARBIDE SEAL INTO NOTCHED FACE OF ROTOR (A SMALL AMOUNT OF GREASE ON THE SEAL & GASKET WILL HELP IN RETAINING PARTS ON ROTOR) CLEAN SILICON CARBIDE SEAL.

INSTALL ROTOR ASSEMBLY

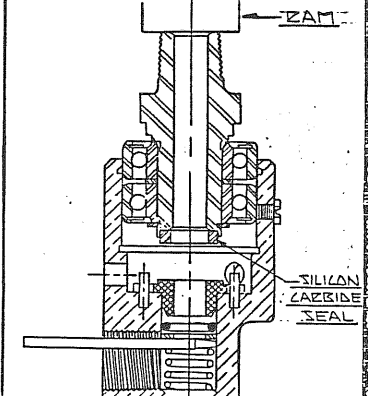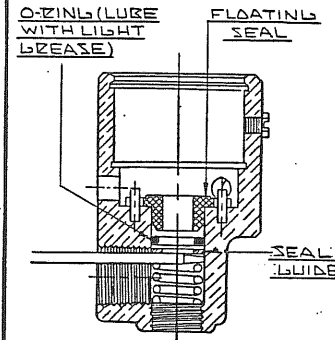

DISASSEMBLY




1 REMOVE HOUSING SNAP RING AND PLUG HOUSING.

2 RETAIN UNION BY CLAMPING ON ROTOR HEX WITH A VISE AND TAPPING DISASSEMBLY ROD WITH A HAMMER.

REMOVE ROTOR ASSEMBLY. AFTER REMOVING ROTOR ASSEMBLY CHECK BALL BEARING'S FOR WEAR OR DAMAGE, REPLACE IF REQUIRED.



1 WITH SPRING COMPRESSOR, COMPRESS COIL SPRING INTO BORE UNTIL RETAINING PIN CAN BE INSERTED THROUGH ENTRANCE PORT AS SHOWN.

REMOVE SPRING COMPRESSOR.

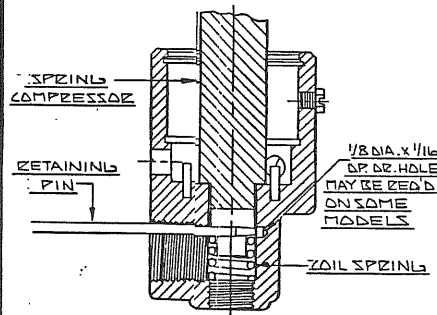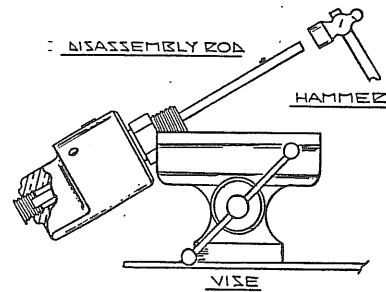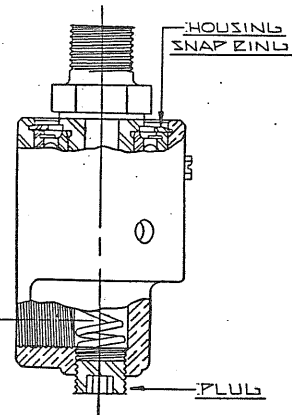


3 REMOVE FLOATING SEAL, O-RING, SEAL GUIDE, COIL SPRING AND PLUGS.

4 REMOVE SILICON CARBIDE SEAL, BASKET AND DISCARD. CLEAN COUNTER BORE OF ROTOR.

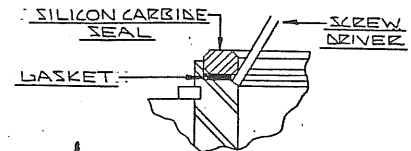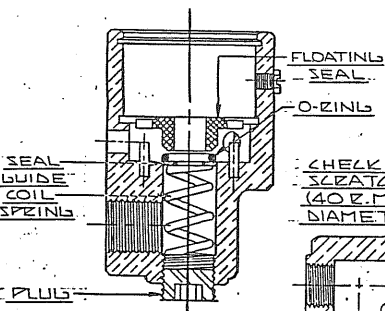


4 INSTALL HOUSING SNAP RING.

REMOVE RETAINING PIN

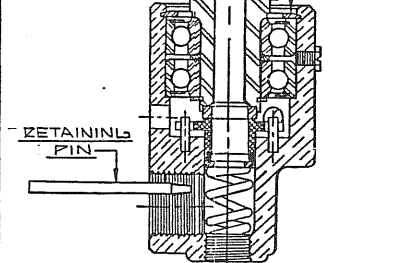

TESTING

TEST UNION WITH 50 P.S.I. MINIMUM AIR PRESSURE BEFORE PERMANENT INSTALLATION.

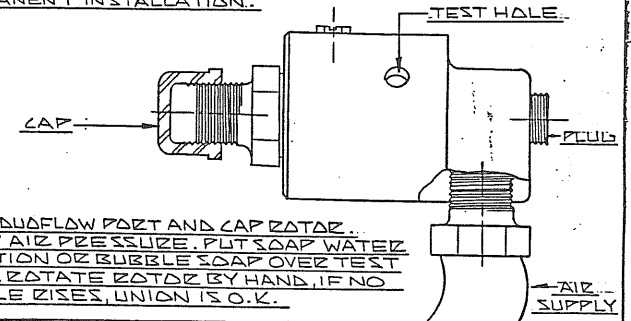

PLUGS BUBBLE PORT AND CAP ROTOR. APPLY AIR PRESSURE. PUT SOAP WATER SOLUTION OR BUBBLE SOAP OVER TEST HOLE. ROTATE ROTOR BY HAND, IF NO BUBBLE RISES, UNION IS O.K.

CHECK AREA OF BORE SHOWN FOR WEAR OR SCRATCHES. THE BORE MUST BE SMOOTH (40 R.M.S. MAX.) AND MAY BE ENLARGED TO THE DIAMETERS SHOWN IN CHART BELOW.

MODEL	A MAX.	MODEL	A MAX.
057	.629	527	1.574
157	.799	557	1.884
257	1.009	657	2.327
357	1.471		

H	Q	P	G	E	D	C	B	A
1781	5/16	1/2	1/2	1/2	1/2	1/2	1/2	1/2
1911	7/16	1/2	1/2	1/2	1/2	1/2	1/2	1/2
1911	7/16	1/2	1/2	1/2	1/2	1/2	1/2	1/2
1911	7/16	1/2	1/2	1/2	1/2	1/2	1/2	1/2
1911	7/16	1/2	1/2	1/2	1/2	1/2	1/2	1/2

DEUBLIN COMPANY
NORTHBROOK, ILLINOIS, U.S.A.
REPAIR INSTRUCTIONS 57 SERIES
FIELD REPAIRABLE UNIONS
FILMED
NO.

DA-49